


Go to the list and click to go directly to the spare part at the webshop! Worldwide shipping!
 To find out more visit <https://europeairguns.com>
 If there is a spare part that is missing, please contact us here:
<https://europeairguns.com/en/contact-us>

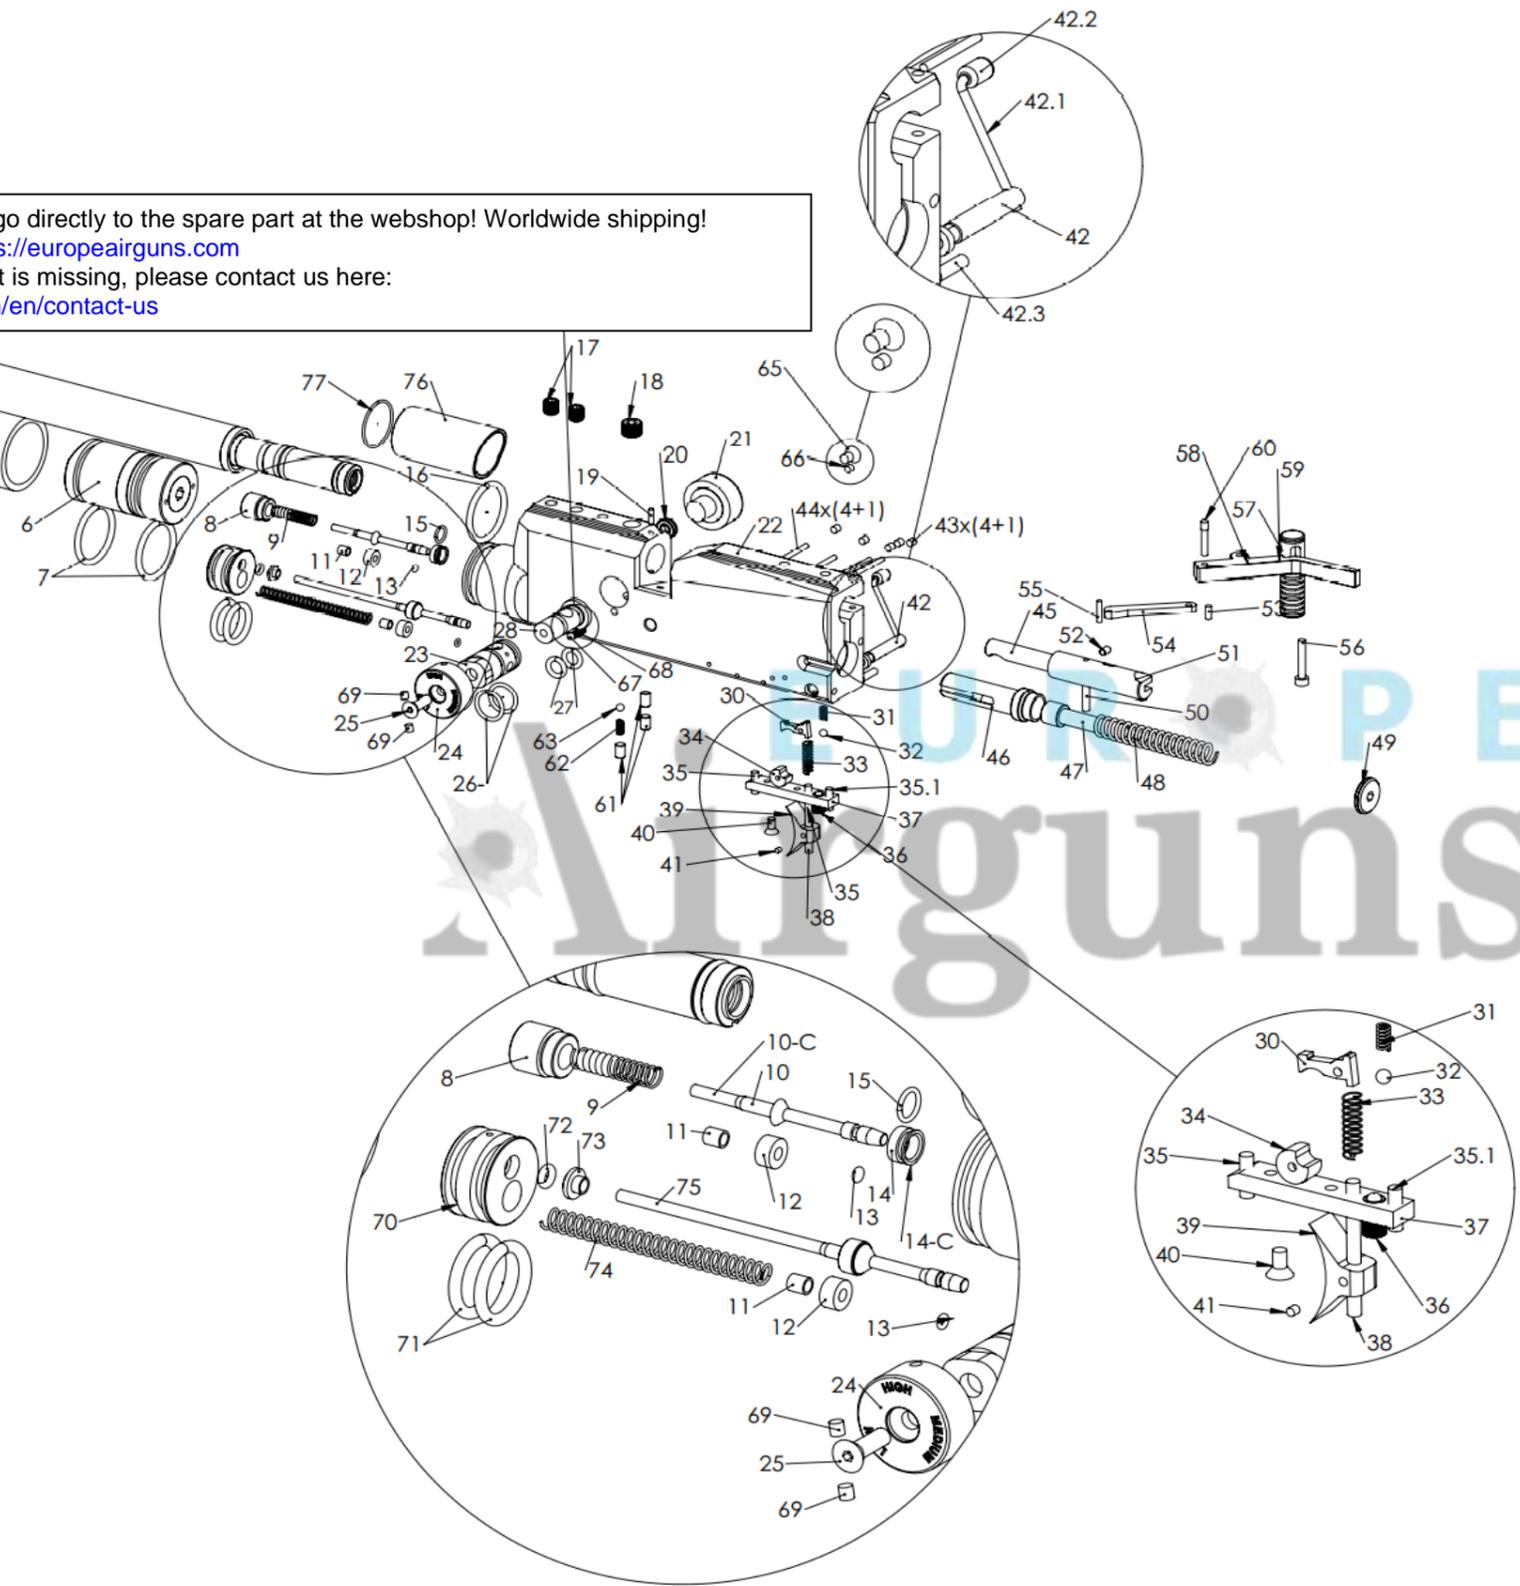

| Position | Description | Art. No. | Position | Description | Art. No. |
|----------|---|----------|----------|--|------------|
| 1 | Pressure gauge 25mm Plastic 1/8" | FX11503 | 40 | Countersunk Screw M3x6 | FX2504 |
| 2 | Dust Cover | FX19544 | 41 | Grub screw M2,5x2,5 | FX12033 |
| 3 | Tube end pressure gauge | FX20080 | 42 | Safety pivot Bullpup | FX20056 |
| 3.1 | Plastic washer 2mm 1/8" | FX5005 | 42.1 | Safety Lever 32,5mm | FX19860 |
| 3.2 | O-ring 24x2 NBR 70 | FX19484 | 42.2 | Safety knob | FX11200 |
| 3.3 | O-ring 23,ox2,5 NBR 70 | FX19485 | 42.3 | Grub screw M3x8 | FX19742 |
| 3.4 | O-ring 4x1,5 NBR70 | FX19109 | 43 | Cup point grub screw M3x3 | FX2562 |
| 3.5 | Countersunk screw M4x8 Torx | FX11511 | 44 | Cylindrical pin 2h6x20 | FX11502 |
| 4 | Barrel Cpl., see drawing F10061-Dreamline Barrel kit | | 45 | Pellet probe Dreamline .177 | FX20060 |
| 5 | Tube 34x360 (.177, .22) | FX19830 | 45 | Pellet probe Dreamline .22 | FX20061 |
| 6 | Tube 34x475 (.25, .30) | FX19831 | 45 | Pellet probe Dreamline .25 | FX20062 |
| 7 | Regulator Airtube adjustable. See drawing F10056 | FX20199 | 45 | Pellet probe Dreamline .30 | FX20063 |
| 8 | O-ring 23x2,5 NBR70 | FX19485 | 46 | Hammer VZ | FX19039 |
| 9 | Valve holder Dreamline, until ser.no. 194000 | FX20037 | 47 | Hammer weight 4mm cal. .177, until ser. No. 194000 | FX19213 |
| 10 | Spring 0,5x4x20, until ser.no. 194000 | FX19850 | 47 | Hammer weight addition cal. .177, until ser. No. 194000 | FX18041 |
| 10C | Valve pin Dreamline Complete, until ser.no. 194000 | FX20135 | 47 | Hammer Weight cal. .22, .25, .30, until ser. No. 194000 | FX17003 |
| 11 | Valve Pin Dreamline, until ser.no. 194000 included in complete valve pin | FX20036 | 47 | Hammer weight, cal. .177, .22, .25 after serial No. 194000 | FX19215 |
| 12 | Holder Valve seal, included in complete valve pin | FX2041 | 47 | Hammer weight cal. .30, after serial No. 194000 | FX17003 |
| 12 | Gasket SHP, included in complete valve pin | | 47 | Hammer weight Tugsten 8mm | FX17003 |
| 13 | Valve gasket 7.4x3.5x2.9 Impact, from ser. No. 0101759, included in complete valve pin 20153C-1 | | 48 | Hammer spring V2 | FX11500 |
| 14 | O-ring 1,5 x 1,0 N BR 70, also included in complete valve pin | FX2528 | 49 | Hammer spring adjuster (only on Classic model) | FX11541 |
| 14C | Valve seat SHP Complete, until serial no. 0101759 | FX19060 | 50 | Cylindrical pin 3h6x20 | FX11510 |
| 14C | Valve seat Complete, after serial no. 0101759 | FX2024C | 51 | Carrier Dreamline | FX20058 |
| 14C | Valve seat Cal. .30 Complete 10J-12FT | FX19217 | 52 | Grub screw M3x4 | FX16092 |
| 15 | O-ring 6x1 N BR 90, also included in valve seal complete 19060 | FX19061 | 53 | Cylindrical pin 2,5m6x6 | FX19026 |
| 15 | O-ring 8x1 N BR 90, also included in valve seal complete 2024C | | 54 | Linkage Crown | FX19935 |
| 16 | O-ring 23x2,5 NBR70 | FX19485 | 55 | Cylindrical pin 2h6x10 | FX19213 |
| 17 | Grub screw M6x6 | FX19846 | 56 | Socket head cap screw MC65 M3X18 | FX11060 |
| 18 | Grub screw M8x6 | FX19955 | 57 | Side lever handle handle B2-WC-IM | FX19611 |
| 19 | Cylindrical pin 2h6x6 | FX19601 | 58 | Magnet 5x4mm | FX20055 |
| 20 | X-ring 3,63x2,62 NBR 70 | FX19762 | 59 | Side lever Dreamline | FX20064 |
| 21 | Pressure gauge 23mm | FX19772 | 60 | Screw M3 (special) | FX19034 |
| 22 | Main block Dreamline, Until serial no. 190310 use art-no.20020 R | FX20126R | 61 | Grub screw M4x6 flat, until ser. No. 190310 | FX2637 |
| 23 | Power adjuster, outer, Until serial no. 190310 use art no. 20034 | FX20125 | 62 | Spring 0,5x2,5x6,1 ... until ser. No. 190310 | FX11501 |
| 24 | Power adjuster Crown, Until serial 190310 use art-no.19915 | FX20123 | 63 | Steel ball 3mm, until ser. No. 190310 | FX4066 |
| 25 | Countersunk screw M4x14 | FX16104 | 64 | N/A | |
| 26 | O-ring 11,1x1,6 NBR90 | FX19956 | 65 | Countersunk screw M4x6, after ser. no. 190310 | FX5208 |
| 27 | O-ring 5,5 x 2 NBR 70 | FX19953 | 66 | Grub screw M3x3, after ser. no. 190310 | FX2562 |
| 28 | Power adjuster inner, Crown, Until serial no. 190310 use art-no.19922 | FX20124 | 67 | Steel ball 3mm, after ser. No. 190310 | FX4066 |
| 29 | N/A | N/A | 68 | Spring 0,5x2,5x6,1 after ser. No. 190310 | FX11501 |
| 30 | Triggersear v7, 8, 12 | FX19177 | 69 | Grub screw M3x3, after ser. No. 190310 | FX2562 |
| 31 | Spring 0,5x2,5x6,1 | FX11501 | 70 | Cover Valve Pin long, HP, after ser. no. 194000 | FX20152 |
| 32 | Steel ball 3,175mm V1.2.3.4.5 | FX11527 | 70 | Cover Valve pin long, 10J, 12FT, after ser. no. 194000 | FX20175 |
| 33 | Spring 0,32x3,2x14,4 | FX11504 | 71 | O-ring 13,95x2,62 NBR 70, after ser.no. 194000 | FX12045 |
| 34 | Trigger Wheel | FX11525 | 72 | O-ring 2,5x1,5 NBR90, after ser.no. 194000 | FX5111 |
| 35 | Grub screw M3x8 | FX19742 | 73 | Springseat, after ser. no. 194000 | FX19038 |
| 35.1 | Grub screw M13x10 | FX11508 | 74 | Spring 0,6x4x60, after ser. no. 194000 | FX20180 |
| 36 | Adjuster screw 2:st stage, soft | FX11062 | 75 | Valvepin Dreamline long complete, after ser.no. 194000 until ser.no. 0101759 | FX20153C |
| 37 | Triggercatch Dreamline, standard | FX20033 | 75 | Valvepin Dreamline long complete, after ser.no. 0101759 | FX20153C-1 |
| 38 | Trigger pin | FX19809 | 76 | Barrel support Dreamline Complete (with o-ring) | FX20162C |
| 39 | Adjustable Trigger blade | FX19136 | 77 | O-ring 20x1 NBR 70 | FX20153 |